



www.barkbusters.net

FITTING INSTRUCTIONS for...



- Beta X Trainer ('2021-on)
- Beta RR Enduro ('2021-on)
- Beta RR Race ('2021-on)
- Beta RR X Pro ('2025-on)

Bar Side View



Preparation

Remove original handguards if fitted.

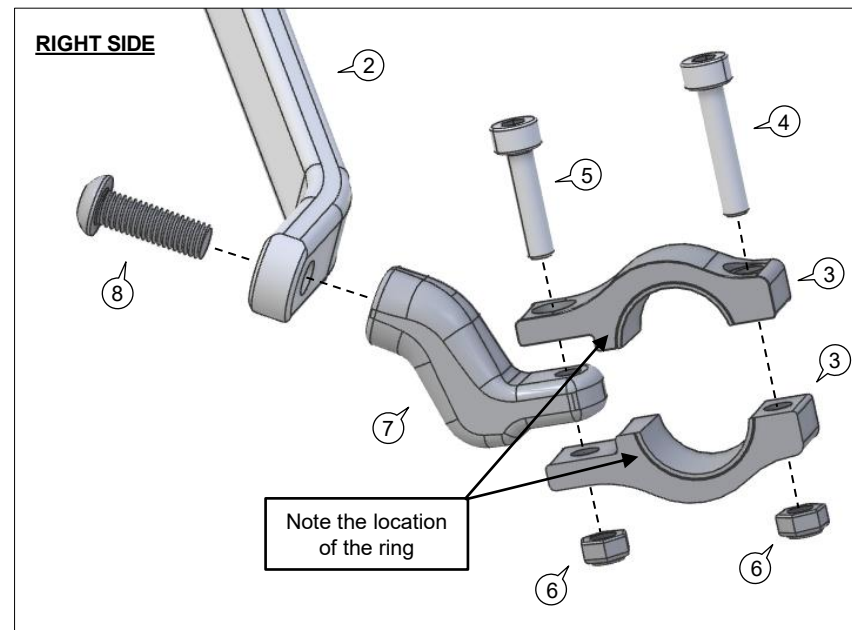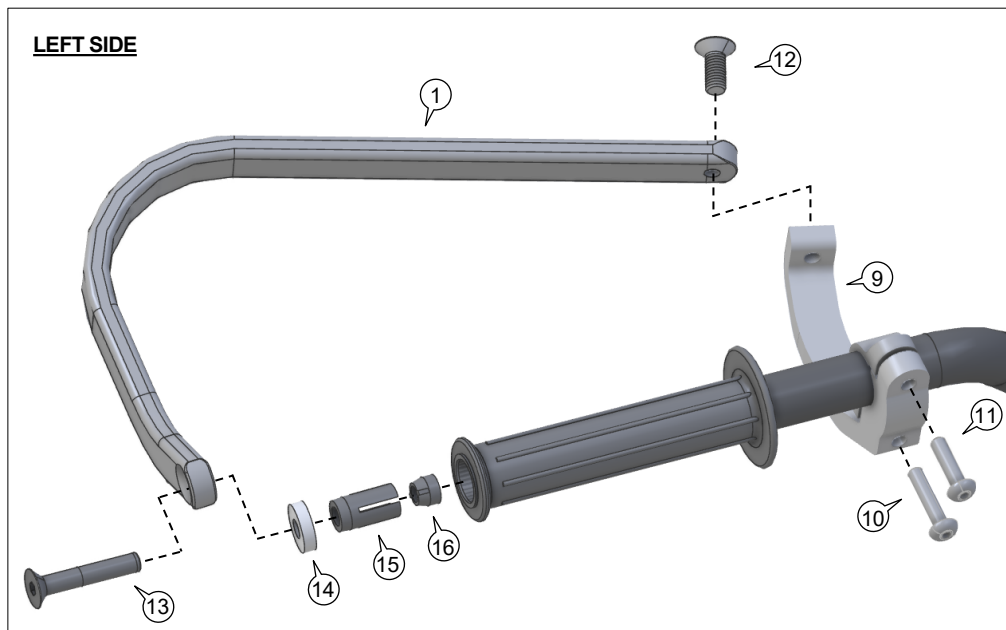

Installation

For Left Side:

- Loosely assemble the clamp (9) to the handlebar as per diagram.
- Attach the handguard backbone (1) with applicable parts to the handlebar end and also to the end of clamp (9).
- Position backbone so it is horizontal when viewed from the side.
- Tighten all bolts to the specified torque (over page) in the following order: (13), (12), then (10) and (11) simultaneously (to keep an even gap with the saddle).

For Right Side:

- Loosely assemble the clamp (3) and clamp connector (7) to the handlebar as per diagram.
- Attach the handguard backbone (2) with applicable parts to the handlebar end (as per the left side) and to the clamp (10).
- Position backbone so it is horizontal when viewed from the side.
- Tighten all bolts to the specified torque (page 2) in the following order: (13), (8), (5) then (4).

1 Aluminium Bar  PN: BAR-V020-L Pcs. Left	2 Aluminium Bar  PN: BAR-V043-R Pcs. Right	3 Clamp Saddle  PN: CS-04 Pcs. 1 Left & 1 Right	4 Socket Head Bolt 30mm  PN: M6X30SHCSZP Pcs. 1	5 Socket Head Bolt 25mm  PN: M6X25SHCSZP Pcs. 1	6 Nylock Nut 6mm  PN: M6LN Pcs. 2	7 Clamp Connector  PN: CP11 Pcs. 1	8 Button Head Bolt 25mm  PN: M8X25BHCSZP Pcs. 1
9 Clamp Frame & Saddle RIGHT  PN: CFS-ADV-L Pcs. 1 set	10 Button Head Bolt 30mm  PN: M6X30BHCSZP Pcs. 1	11 Button Head Bolt 20mm  PN: M6X20BHCSZP Pcs. 1	12 Flat Head Bolt 20mm  PN: M8X20FHCSZP Pcs. 1	13 Flat Head Screw 45mm  PN: M8x45FHCSZP Pcs. 2	14 Collar  PN: BBEC5M Pcs. 2	15 Expander  PN: BBE14A Pcs. 2	16 Taper Nut  PN: NUT12 Pcs. 2

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	28 Nm (20.7 lbf ft)

CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight. Please note that all Rideworx test fitment are done on stock motorcycles with factory standard handlebar, windscreen, etc. in their original positions.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.

Personalise Your Protection
Guard options sold separately

JET JET-003
VPS VPS-003
Storm STM-003
CARBON BCF-003



Email: info@barkbusters.net

@BARKBUSTERSHANDGUARDS

