




**Fitting Instructions for RAD0092BK Radiator Guard  
DUCATI MULTISTRADA 1200 2010-**

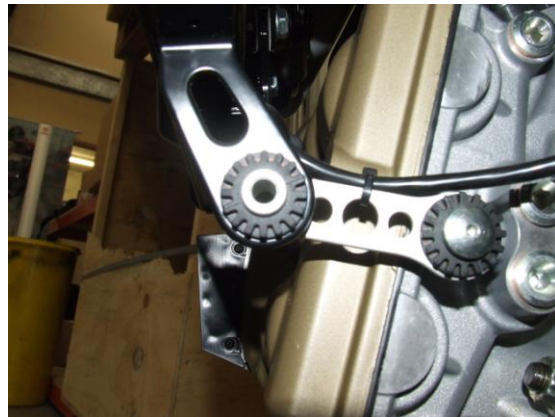

PICTURE 1



PICTURE 2

**In This Kit There Should Be  
1x Radiator Guard  
2x 100mm Lengths of Foam  
1x M6x30mm long button head bolt  
1x M6 Nyloc nut  
2x M6 washers**

- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Remove the two top radiator mounting bolts in position shown in picture 1 (one either side).
- Fit the radiator guard and secure to top mounting brackets using original bolts.
- Using bolt, nuts and washers secure to bottom mounting bracket in position shown in picture 2.