



SS0049

FITTING INSTRUCTIONS FOR SS0049BK SPINDLE SLIDERS
HONDA CB125R 2018 -

Page | 1



THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.
DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.


Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

Please note that in cases where kits are packed with a plastic tube separating components on the spindle bar (this tube should be discarded).

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)



SS0049

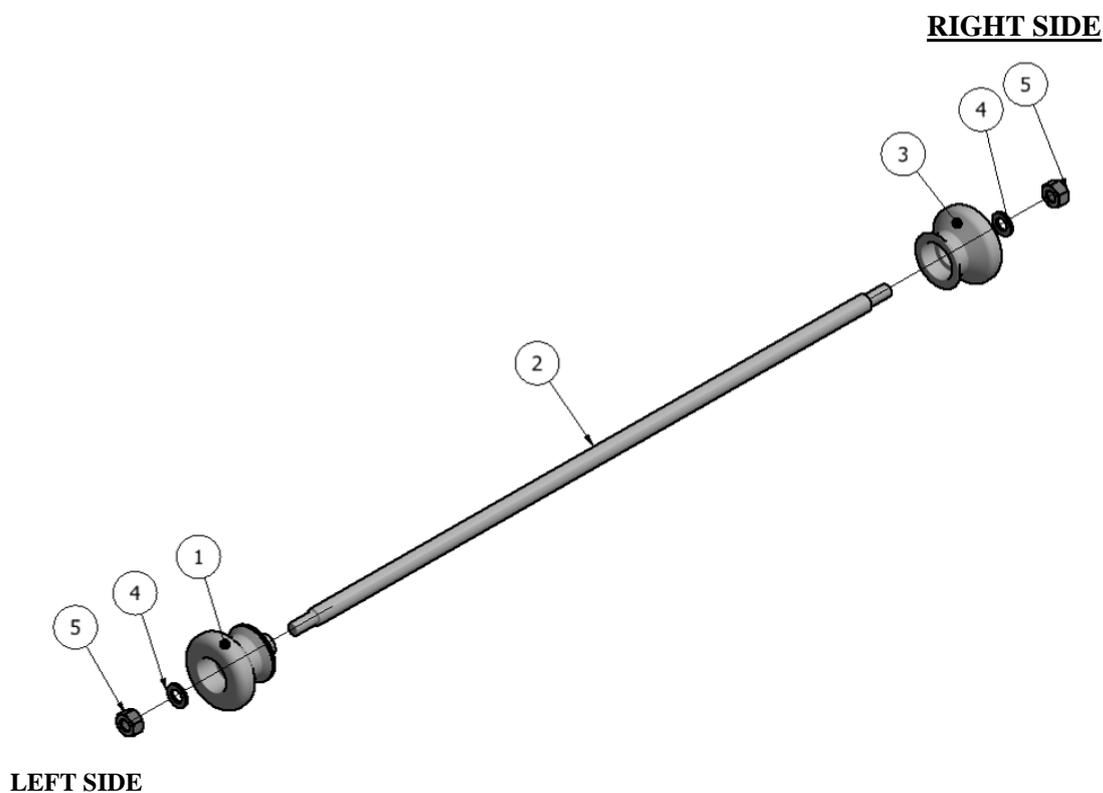

TOOLS REQUIRED

- Socket set to include 2x 10mm sockets and wrenches.

LEGEND

- ITEM 1 = LHS BOBBIN (B0444 with CS525 fitted) (x1)
- ITEM 2 = SPINDLE BAR (SB0108) (x1)
- ITEM 3 = RHS BOBBIN (B0444) (x1)
- ITEM 4 = M6 WASHERS (x2)
- ITEM 5 = M6 NYLOC NUT (x2)

FITTING INSTRUCTIONS

- Position one M6 washer (item 4) and one M6 nyloc nut (item 5) onto one threaded end of the spindle bar (item 2). Ensure that the nyloc nut is fully engaged to the thread.
- Locate the left side bobbin (item 1) onto the bar, so the nut and washer sit inside the counterbore on the bobbin, and position through the rear axle from the left side of the bike, ensuring the bobbin locates within the hole on the OEM axle.
- The bar should now protrude through the right side of the rear axle. Locate the remaining bobbin (item 3) onto the exposed end of the bar, ensuring the bobbin locates over the thread of the axle.
- Fit the remaining washer and nyloc nut to the exposed thread on the bar and tighten.
- Ensure that the components assembled match the exploded diagram shown above. Fully tighten the nyloc nuts on both sides. Do not overtighten – the nyloc nuts will hold it tight.

Digital copies of these instructions are available to download from www.rg-racing.com

ISSUE 1 06/08/2018 (LF)

R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com