

Denali Horn Mount

Triumph Explorer 1200 '12-'14

HMT.11.10100 Instructions Rev:00

PLEASE READ BEFORE INSTALLING

TWISTED THROTTLE products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. TWISTED THROTTLE takes no responsibility for damages caused by improper installation.

All screws, bolts, and nuts, including all replacement hardware provided by TWISTED THROTTLE should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M5.....	3.5 ft-lbs (5 Nm)
M6.....	7 ft-lbs (9.6 Nm)
M8.....	13 ft-lbs (18 Nm)

All screws, bolts, and nuts should be checked after driving the first 30 miles (50 km) to ensure that all are tightened to the proper torque.


Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts, and nuts.

Distributed by:

Twisted Throttle LLC
570 Nooseneck Hill Rd
Exeter, RI 02822

phone: 855.255.5550
fax: 401.223.6955
www.twistedthrottle.com

Installation Instructions

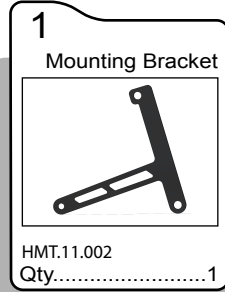

Step One: Remove the OEM lower left side radiator support bracket, be sure to keep all the hardware as it will be used to reinstall the new bracket. Replace the bracket with the new horn mounting bracket as illustrated and reinstall the OEM hardware. Finally use the hardware supplied with your horn to bolt it to the bracket.

