




**FITTING INSTRUCTIONS FOR BRG0043 BRANDED RADIATOR GUARD**

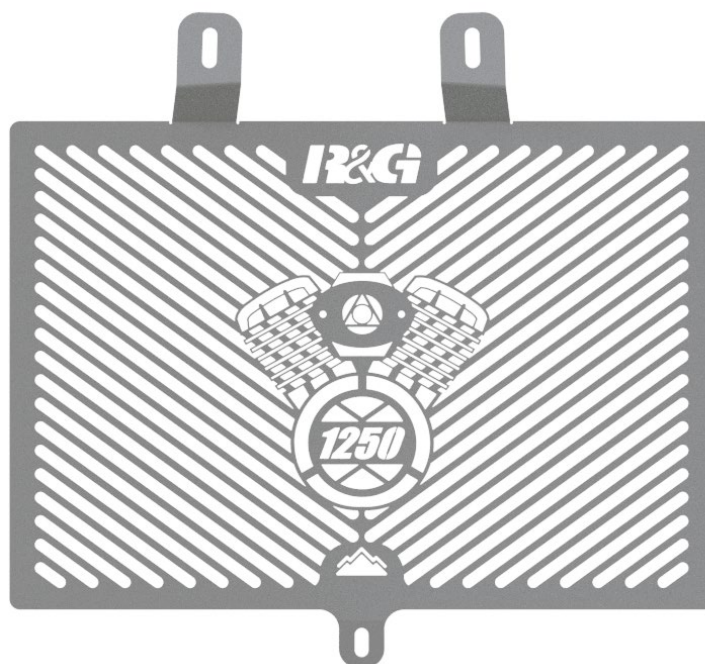

**THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED OVER PAGE.**

SOME PARTS MAY BE SHOWN FOR CLARITY OF INSTRUCTIONS ONLY.

DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

**PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING.**

**IF IN ANY DOUBT WHEN FITTING OUR PRODUCTS, CONSULT ONE OF OUR DEALERS OR HAVE FITTED BY A QUALIFIED TECHNICIAN.**

PLEASE NOTE THAT THE WAY THE KIT IS PACKED DOES NOT NECESSARILY REPRESENT THE WAY OF MOUNTING TO THE BIKE.

IN THE EVENT OF RUBBER WASHERS BEING USED TO HOLD COMPONENTS ONTO BOLTS, THESE RUBBER WASHERS CAN BE THROWN AWAY.

**DIGITAL COPIES OF THESE INSTRUCTIONS ARE AVAILABLE FROM:**


[WWW.RG-RACING.COM](http://WWW.RG-RACING.COM)



### **LEGEND**

<b>ITEM NO.</b>	<b>DESCRIPTION</b>	<b>QTY</b>
ITEM 1	BRANDED RADIATOR GUARD (BRG0043)	1
ITEM 2	SELF-ADHESIVE FOAM x 100mm LONG	2

### **FITTING PICTURE**

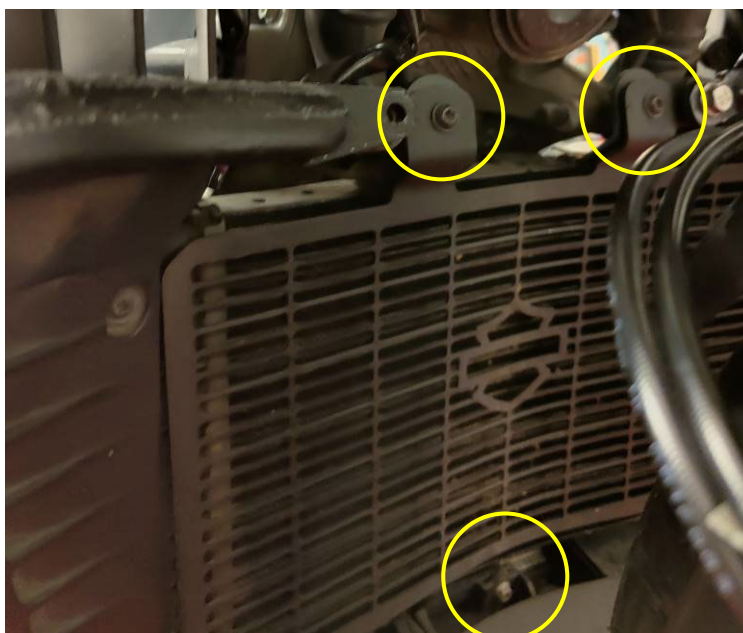

### **FITTING INSTRUCTIONS**

- To fit the radiator guard to the bike, cut the Self-adhesive Foam (**ITEM 2**) into 10mm strips and place on the back of the Branded Radiator Guard spaced evenly where the outer frame will contact the radiator.
- Remove the OE fixings holding on the radiator (Shown in the above picture).
- Slide the Branded Radiator Guard (**ITEM 1**) into position and place the OE fixings through the mounting holes of the Branded Radiator Guard (**ITEM 1**) and radiator.
- Tighten the OEM nut and bolt to the Bike Manufacturers torque setting.

**See more R&G products for your Motorcycle in the link below:**

[R&G Racing | All Products for Harley-Davidson - Pan America 1250 \(2022\) \(rg-racing.com\)](https://www.rg-racing.com)

ISSUE 1 – 17/01/2023 (MH)

R&G

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 [www.rg-racing.com](http://www.rg-racing.com) Email: [info@rg-racing.com](mailto:info@rg-racing.com)