



**FITTING INSTRUCTIONS FOR LP0151BK LICENCE PLATE BRACKET**  
**HONDA CBR500R/ CB500X and CB500F 2013**

Page | 1



**THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED BELOW.**  
**DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.**  
Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike

THE PARTS SHOWN MAY BE REPRESENTATIVE ONLY (FOR CLARITY OF INSTRUCTIONS ONLY)





**LEGEND**

- ITEM 1 = MOULDED REAR LIGHT MOUNTING BRACKET (TB0151 BK) (x1).
- ITEM 2 = REFLECTOR (REFL 1) (x1).
- ITEM 3 = MINI INDICATOR ADAPTORS (I0031) (x4).
- ITEM 4 = LICENCE PLATE ILLUMINATOR/MINI CONNECTORS (CON009) (x3).
- ITEM 5 = LICENCE PLATE ILLUMINATOR ASSEMBLY (LA0002) (x1)
- ITEM 6 = PAINT PEN (x1).
- ITEM 7 = BLACK RUBBER SEAL (SRS002) (300mm LONG).
- ITEM 8 = UNDER-TRAY (TB0151 Part 2) (x1).
- ITEM 9 = LICENCE PLATE MOUNTING BRACKET (TB0151 Part 1) (x1).
- ITEM 10 = SPACERS (S0711) (x2).
- ITEM 11 = M6x40mm LONG COUNTER SUNK BOLT (x2).
- ITEM 12 = M5x16mm LONG COUNTER SUNK BOLT (x1).
- ITEM 13 = 150mm LENGTHS OF HEAT SHRINK (x3).

Page | 2

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

**TOOLS REQUIRED**


- Set of metric Allen keys to include 4 and 6mm A/F size.
- Socket set to include 6, 8, 10 and 12mm A/F socket and wrench.
  - 10mm spanner.
  - Phillips driver.
- Small amount of super glue.



PICTURE 1




PICTURE 2

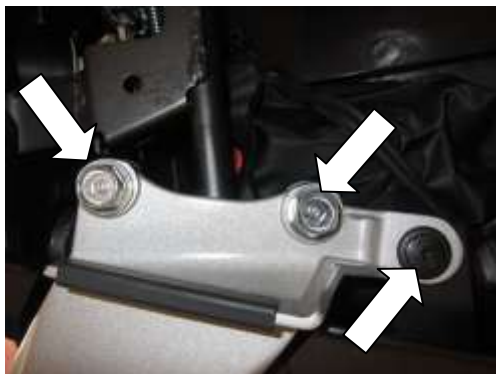

PICTURE 3



PICTURE 4

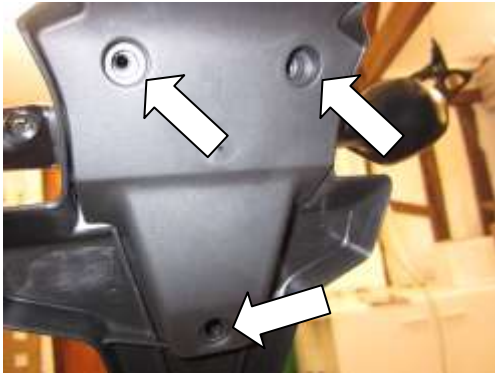

PICTURE 5



PICTURE 6



PICTURE 7



PICTURE 8



PICTURE 9



PICTURE 10



PICTURE 11



PICTURE 12



PICTURE 13



PICTURE 14



PICTURE 15



PICTURE 16



PICTURE 17



PICTURE 18



PICTURE 19



PICTURE 20



PICTURE 21



PICTURE 22



PICTURE 23



PICTURE 24



PICTURE 25



PICTURE 26



PICTURE 27



PICTURE 28



PICTURE 29



PICTURE 30



PICTURE 31



PICTURE 32



PICTURE 33



PICTURE 34



PICTURE 35



PICTURE 36

#### **FITTING INSTRUCTIONS**

- Remove the pillion seat using the key.
- Remove the rider's seat.
- Remove the two bolts and the plastic push rivet arrowed in picture 1 and remove the grab rail.
- Remove the bolt and cable tidy (metal bracket) arrowed in picture 2.
- Remove the two bolts and the plastic push rivet arrowed in picture 3 and remove the grab rail.
- Remove the bolt arrowed in picture 4.
- Remove the three bolts arrowed in picture 5.
- Remove the bolt arrowed in picture 6.
- Remove the plastic cable/under-tray cover as shown in picture 5.
- Remove the two bolts arrowed in picture 7 and remove the rear light cowl.
- Remove the side panel bolt arrowed in picture 9.
- Remove the plastic push rivet from under the side panel as arrowed in picture 10.
- Remove the left hand side panel.
- Remove the bolt arrowed in picture 11.
- Remove the plastic push rivet from under the side panel as arrowed in picture 12.
- Gently remove the side panel and place on sub-frame (this will save from having to remove the seat lock mechanism). As shown in picture 13.
- Disconnect the four plug sockets arrowed in picture 14.
- Remove the four bolts arrowed in pictures 15 and 16.
- Gently remove the original licence plate bracket and remove the cable tie arrowed in picture 17.
- With the original licence plate bracket removed from the motorcycle remove the screw and cable clip arrowed in picture 18.
- If reusing the original indicators remove as below.
- Remove the nut arrowed in picture 18.
- Pull the securing plate out in the direction arrowed in picture 19 and remove.
- Pull the indicator and wiring through the rubber grommet as shown in picture 20.
- Remove the rubber grommet as shown in picture 21. Repeat for the other indicator.

R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 [www.rg-racing.com](http://www.rg-racing.com) Email: [info@rg-racing.com](mailto:info@rg-racing.com)





- Fit the indicators to the new licence plate bracket (item 1) as original. If using mini's fit the indicators of choice to the licence plate bracket assembly (R&G mini indicator product code RG370 for bulb type and RG371 for LED type) using the four indicator adaptors (item 3).
- Remove the two screws arrowed in picture 22.
- Remove the original rear light (it is rubber mounted on the upstands arrowed in picture 23).
- Remove the two location spacers arrowed in picture 23.
- Remove the two side mounting spacers by pushing the aluminium centre part out in the direction arrowed in picture 24 and remove the two side mounting rubber grommets.
- Fit the two side mounting rubber grommets to the new licence plate bracket (item 1) as original (shown in picture 24).
- Fit the two aluminium side mounting spacers as original to the new licence plate bracket as shown in picture 24.
- Fit the two upstands to the new licence plate bracket as shown in picture 23.
- Fit the original rear light to the new licence plate bracket as original.
- Fit the new licence plate illuminator (item 5) through the new licence plate bracket (item 9) as shown in picture 28.
- Fit the new licence plate bracket with licence plate illuminator through the new rear light mounting bracket (item 1) as shown in picture 29 and secure with the washers and nuts supplied as shown in pictures 30 and 31.
- **PLEASE NOTE YOU WILL NEED TO GLUE THE LIGHT SHROUD TO THE LED LICENCE PLATE ILLUMINATOR USING SUPER GLUE.**
- You will need to remove the lower section of the original licence support bracket using either hack-saw, dremmel or angle grinder as shown in pictures 25 and 26 (please note do not remove the threaded bosses) as indicated below.



R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 [www.rg-racing.com](http://www.rg-racing.com) Email: [info@rg-racing.com](mailto:info@rg-racing.com)